# Q Card User Guide

Q card is a 340 seconds. mini high quality voice card.

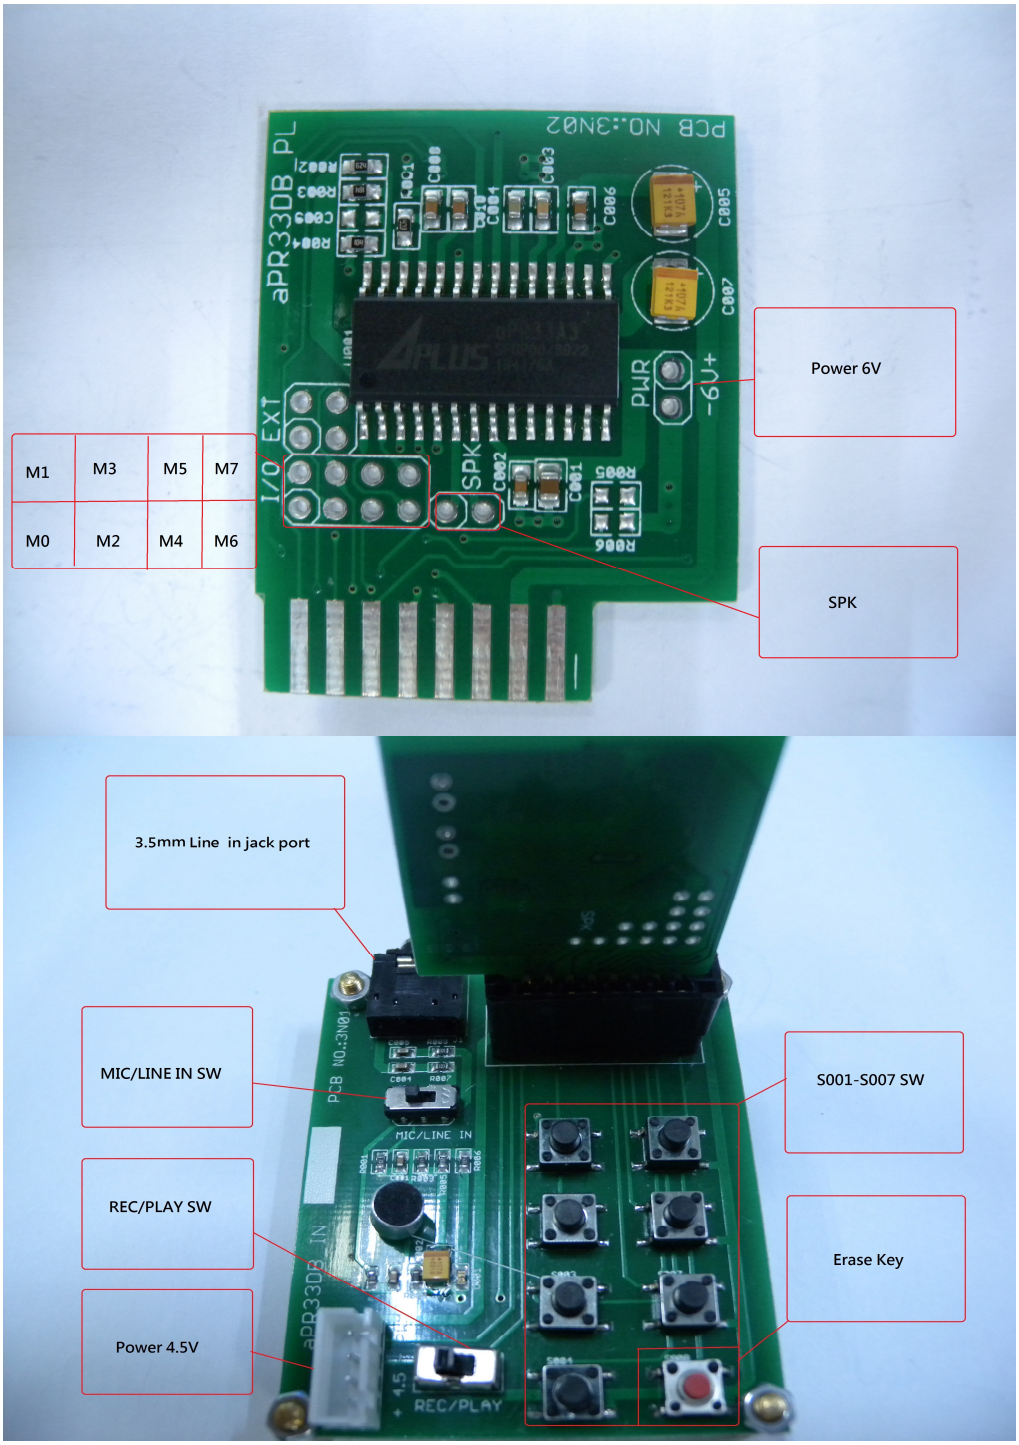


You can use microphone-in or line-in to do seven sections random time voice recording simply with Q writer. After recording satisfied, Q card offer I/O holes to allow you connecting speaker, batteries and switches to play.

- How to use our Q writer to do the recording & playback

  Step 1 : Insert Q card into Q writer

  Step 2 : Connect the battery & speaker case.

  Step 3 : Slide the MIC/LINE IN SW to left for microphone recording
  Slide the MIC/LINE IN SW to right for line in recording.

  Step 4 : Slide the REC/PLAY SW to REC. Press and release S001, hear " BEEP " sound with LED on to start the first section recording. Press again to hear BEEP sound with LED off to stop its recording. Same as S002-S007.

  Step 6 : Slide the REC/PLAY SW to PLAY. Press and release TACT SW to play voices with LED On. After finished the playback, LED will be off. Same as S002-S007.

  Step.7 : If all messages reach to 340secs,, there will be a long " Beep " sound to remind you that you can not record any further data.

  *** How to delete the original messages and record new data :
  You will hear " BEEP " " BEEP " sound to remind that you can not do any recording if there are messages in . You have to keep press Erase key then press the section key that you want to change ( LED on in the meantime ) to delete its original data. Then you can start your new recording.